


# Chapter 6. TROUBLESHOOTING


The followings explain errors and corrective action when operating the A/T module.  
For the problems relating to the CPU module, refer to the CPU module User's Manual.

## 6.1 Troubleshooting Procedure

### 6.1.1 RUN LED off

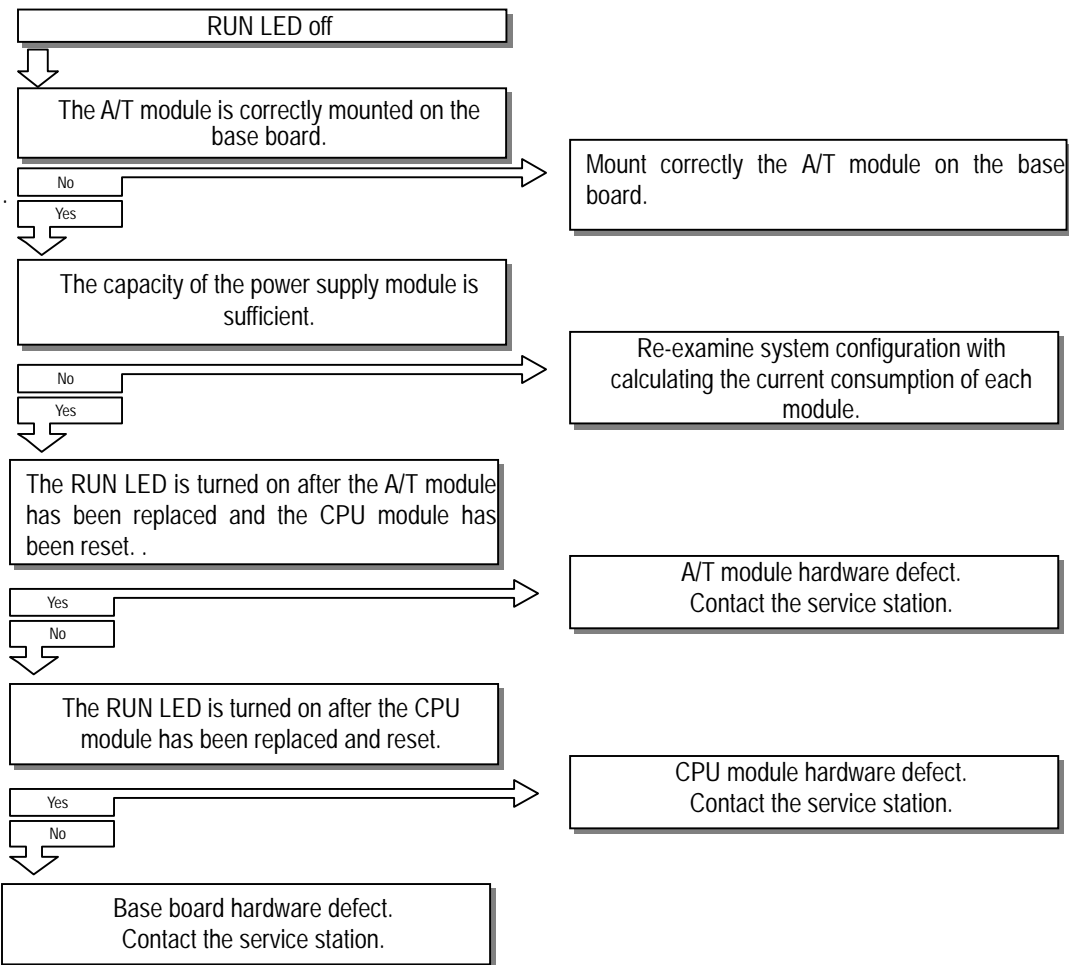

### 6.1.2 The Contact Indication LED for the Timer Operation does not Turn On when the Timer Starts its Operation.

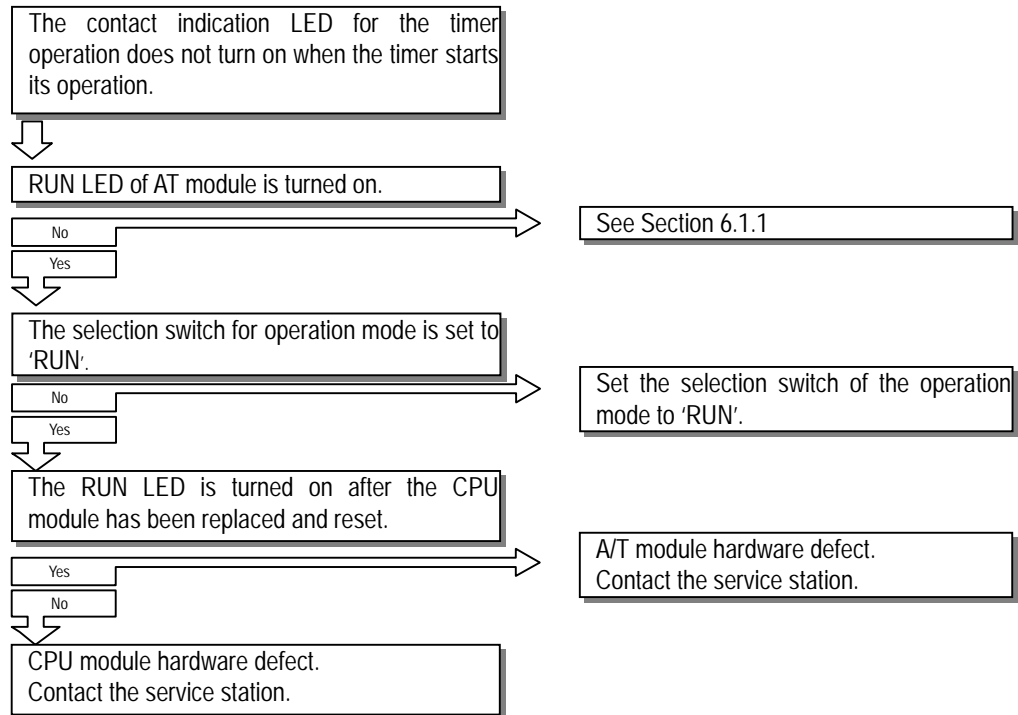

### 6.1.3 The Operation Junction does not Turn on Though the Setting Time has Passed after the Start of the Timer

